



# OmniOn Power™ Power Express 2 Circuit and 4 Circuit Combiner

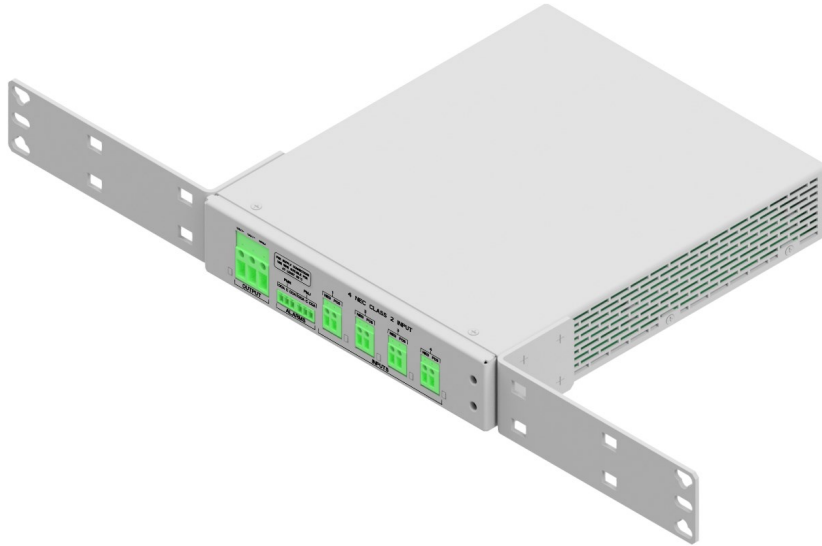

1600312215A 4CKT COMBINER

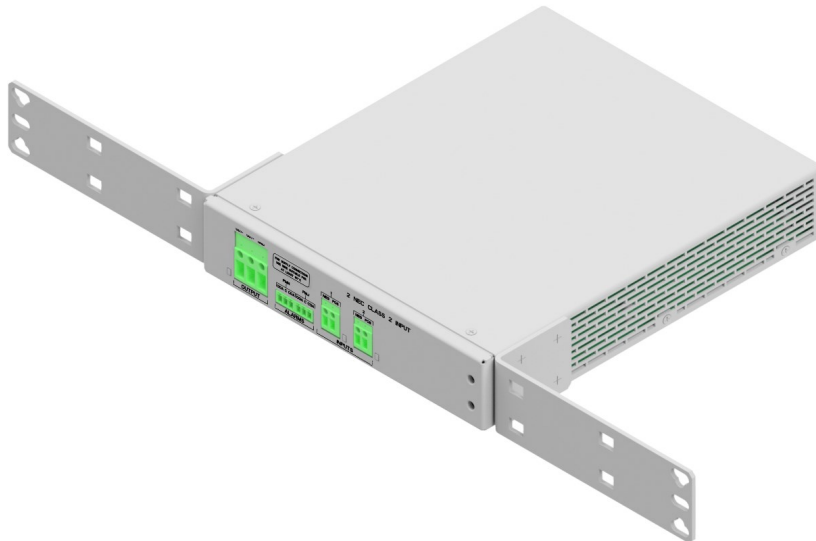

1600389997A 2CKT COMBINER

# Contents

<b>Safety statement .....</b>	<b>3</b>
<b>Precautions .....</b>	<b>4</b>
<b>Equipment Identification .....</b>	<b>5</b>
<b>Information - Tools Required .....</b>	<b>6</b>
<b>Step 1 – Mount Shelf.....</b>	<b>6</b>
<b>Step 2 – Connect chassis Ground .....</b>	<b>6</b>
<b>Step 3 – Connect DC Input .....</b>	<b>7</b>
<b>Step 4 – Connect DC Output .....</b>	<b>7</b>
<b>Step 5 – Connect DC Output to Ground .....</b>	<b>8</b>
<b>Step 6 – Connect Alarm Cable.....</b>	<b>8</b>
<b>Information: LEDs and Alarms .....</b>	<b>9</b>
<b>Specifications and Applications .....</b>	<b>9</b>
<b>Change History (excludes grammar &amp; clarifications).....</b>	<b>10</b>
<b>Disclaimer .....</b>	<b>11</b>

# List of Figures

<b>Figure 1 Mounting Shelf .....</b>	<b>6</b>
<b>Figure 2 Chassis Ground Connection .....</b>	<b>6</b>
<b>Figure 3 DC Input Connection .....</b>	<b>7</b>
<b>Figure 4 DC Output connection .....</b>	<b>7</b>
<b>Figure 5 Alarm Connection .....</b>	<b>8</b>



## Safety Statements

- Do not install this equipment over combustible surfaces.
- Rules and Regulations - Follow all national and local rules and regulations when making field connections.
- Compression Connectors:
  - U. S. or Canada installations - use Listed/Certified compression connectors to terminate Listed/Certified field-wire conductors where required.
  - All installations - apply the appropriate connector to the correct size conductor as specified by the connector manufacturer, using only the connector manufacturer's recommended or approved tooling for that connector.
- Electrical Connection Securing - Torque to the values specified on labels or in the product documentation.
- Cable Dress - dress to avoid damage to the conductors and undue stress on the connectors.
- Fuses and Circuit Breakers - Size as required by the National Electric Code (NEC) and/or local codes.
- Refer to the equipment ratings to assure current does not exceed:
  - Continuous Load (List 1) - 60% of protector rating.
  - Maximum Load (List 2 - typically end of discharge) - 80% of protector rating.
- Field-wired Conductors - Follow all National Electric Code (NEC) and local rules and regulations.
  - Insulation rating: 90°C minimum; 105°C (minimum) if internal to enclosed equipment cabinets.
  - Size AC field-wired conductors with 75°C ampacity (NEC) equal to or greater than their panel board circuit breaker rating.
  - Size DC field-wired conductors with 90°C ampacity (NEC) equal to or greater than circuit breaker/fuse rating.
- AC and DC input disconnect/protection - Provide accessible devices to remove input power in an emergency.
- Alarm Signals - Provide external current limiting protection. Rating 60V, 0.5A unless otherwise noted.
- Grounding - Connect the equipment chassis directly to ground. In enclosed equipment cabinets connect to the cabinet ac service ground bus. In huts, vaults, and central offices connect to the system bonding network.
- Circuit Breakers and Fuses - Use only those specified in the equipment ordering guide.
- GMT Style Fuses - Use only fuses provided with safety caps.



## Precautions

- Install, service, and operate equipment only by professional, skilled and qualified personnel who have the necessary knowledge and practical experience with electrical equipment and who understand the hazards that can arise when working on this type of equipment.
- Disconnect batteries from outputs and/or follow safety procedures while working on equipment. Batteries may be connected in parallel with the output of the rectifiers. Turning off the rectifiers will not necessarily remove power from the bus.
- Do not disconnect permanent bonding connections unless all power inputs are disconnected.
- Verify that equipment is properly safety earth grounded before connecting power. High leakage currents may be possible.
- Exercise care and follow all safety warnings and practices when servicing this equipment. Hazardous energy and voltages are present in the unit and on the interface cables that can shock or cause serious injury. When equipped with ringer modules, hazardous voltages will be present on the ringer output connectors.
- Use the following precautions in addition to proper job training and safety procedures:
  - Use only properly insulated tools.
  - Remove all metallic objects (key chains, glasses, rings, watches, or other jewelry).
  - Follow Lock Out Tag Out (LOTO) procedures: customer specified, site specific, or general as appropriate. Disconnect all power input before servicing the equipment. Check for multiple power inputs.
  - Wear safety glasses.
  - Follow Personal Protective Equipment requirements: customer specified, site specific, or general as appropriate.
  - Test circuits before touching.
  - Be aware of potential hazards before servicing equipment.
  - Identify exposed hazardous electrical potentials on connectors, wiring, etc.
  - Avoid contacting circuits when removing or replacing covers.
  - Use a personal ESD strap when accessing or removing electronic components.
  - Personnel with electronic medical devices need to be aware that proximity to DC power and distribution systems, including batteries and cables, typically found in telecommunications utility rooms, can affect medical electronic devices, such as pacemakers. Effects decrease with distance.

## Equipment Identification

<b>COMPANY NAME</b>							
COMPANY HQ ADDRESS							
<b>POWER EXPRESS 2CKT COMBINER</b>							
COMCODE: 1600389997A				SERIES: X:X			
							
SERIAL:				LBGEPEYYLLWWNNNNNN			
INPUT, DC	V	(Amax)	(Wmax)	OUTPUT, DC	V	(Amax)	(Wmax)
	2 X 30 - 60	1.67	<100		52	3.1	165
 <p>FOR USE IN RESTRICTED ACCESS LOCATION MOUNT ON NON-COMBUSTIBLE SURFACE ONLY or SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY</p> <p>MULTIPLE SOURCES OF DC MAY BE PRESENT. REMOVE ALL INPUTS AND OUTPUT PRIOR TO SERVICING.</p> <p>HAZARDOUS ENERGY PRESENT: RISK OF INJURY.</p>				<div style="border: 1px dashed black; padding: 10px; min-height: 60px;">SAFETY AGENCY LOGO</div>			
PRODUCT OF MEXICO							

**2 Circuit Combiner - ID Label information**

<b>COMPANY NAME</b>							
COMPANY HQ ADDRESS							
<b>POWER EXPRESS 4CKT COMBINER</b>							
COMCODE: 1600312215A				SERIES: X:X			
							
SERIAL:				LBGEPEYYLLWWNNNNNN			
INPUT, DC	V	(Amax)	(Wmax)	OUTPUT, DC	V	(Amax)	(Wmax)
	4 X 30 - 60	1.67	<100		52	6.25	325
 <p>FOR USE IN RESTRICTED ACCESS LOCATION MOUNT ON NON-COMBUSTIBLE SURFACE ONLY or SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY</p> <p>MULTIPLE SOURCES OF DC MAY BE PRESENT. REMOVE ALL INPUTS AND OUTPUT PRIOR TO SERVICING.</p> <p>HAZARDOUS ENERGY PRESENT: RISK OF INJURY.</p>				<div style="border: 1px dashed black; padding: 10px; min-height: 60px;">SAFETY AGENCY LOGO</div>			
PRODUCT OF MEXICO							

**4 Circuit Combiner - ID Label information**

## Information – Tools Required

- Wire cutters and strippers
- Cable crimpers
- Torque wrench (0-40 in-lb)
- Philips Screw Driver - #0
- Flat Screw Drivers - 1/8" and 1/16"
- Sockets - 7/16" & 5/16"

**Note:** It is recommended that wire ferrules are used on all power and ground connections.

## Step 1 – Mount the shelf

1. Position the Combiner Shelf System mounting ears with the mounting frame. If necessary, mounting ears can be reversed to better align with other equipment in the frame.
2. Attach shelf to the frame using four screws on each side (two on each side) - 12-24 (provided/Not provided).
3. Torque to 40 in-lb (4.5Nm) - 5/16" socket.
4. Provide 2 inch minimum clearance at back of shelf for converter airflow.

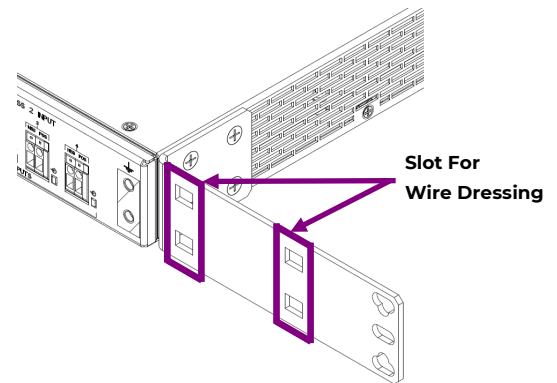


Figure 1. Mounting shelf

## Step 2 – Connect Chassis Ground

1. Minimum 6 AWG wire is recommended.
2. Lug - double-hole 1/4" on 5/8" centers (Lugs not provided).
3. Secure lug with screws - 10-32 (provided)
4. Torque to 10-32 screws to 30 in-lb (3.4Nm) - 5/16" socket.

Some applications may rely on frame mounting screws for shelf ground omitting the need for this shelf ground cable.

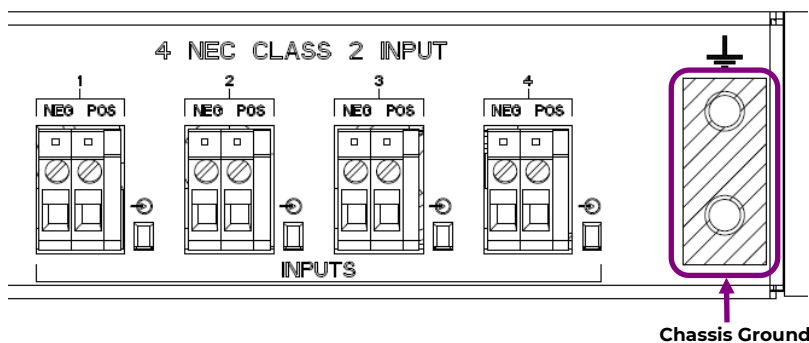


Figure 2. Chassis Ground Connection

## Step 3 – Connect DC Input

- Verify that the DC Input voltage is 48V<sub>DC</sub> using a meter.
- Match the marked polarity on all inputs.

**Note:** Incorrect Input Voltage or Polarity will cause the equipment to not operate properly.

1. Size input cables to minimize voltage drop for installation (recommended wire size is 12 AWG (2.5 mm<sup>2</sup>).
2. Strip 0.35" or 7/20" (9 mm).
3. Tighten the screw -(1/16" flat screw driver). torque to 4.5 in-oz (0.5 Nm).
4. Pull wire to verify connection.

**Caution:** Ensure cables do not come in contact with sharp or rough surfaces that may damage insulation and cause a short circuit.

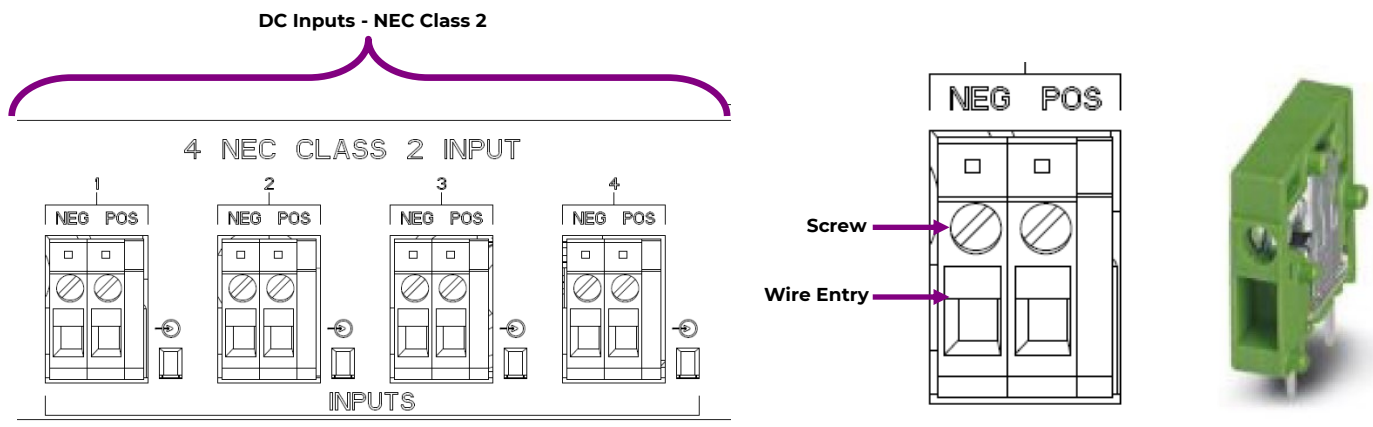


Figure 3. DC Input Connections

**Note:** For 2 circuit combiner there are two input connections.

## Step 4 – Connect DC Output

- There are 2 DC terminal Outputs,

**OUT + :** Positive DC Output

**OUT - :** Negative DC Output

1. Use appropriately sized output cable for the load being served.
2. Strip the output wire 1/2".
3. Insert wire fully into wire entry.
4. Tighten screw - torque to 5 in-oz (0.6 Nm).
5. Pull wire to verify insertion.

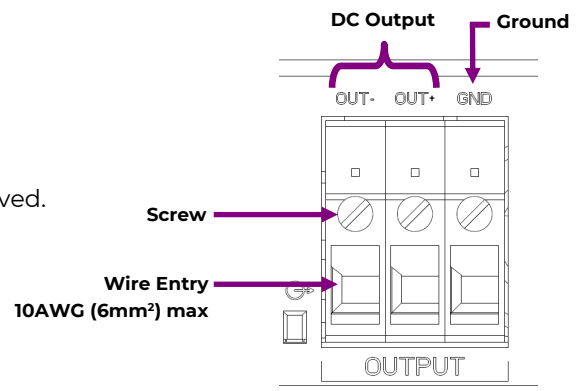


Figure 4. DC Output Connections

## Step 5 – Connect DC Output to Ground

DC output is isolated from ground (floating). It must be connected to

- Connect Ground to an output at a single point.

This connection may be made on the output terminal block.

**Note:** Either DC Output polarity (Out+ or OUT-) must be externally connected to DC Reference Ground (CO Ground).

## Step 6 – Connect Alarm Cable

- Remove alarm connector from the chassis.
- Connect alarm wires.
  1. Strip wire 3/16"
  2. Insert wire fully into wire entry
  3. Tighten screw
  4. Pull wire to verify
- Insert alarm connector into the chassis.

**Warning:** Shock Hazard and Equipment Damage - Equipment and subassembly ports.

1. are suitable for connection to intra-building or unexposed wiring or cabling;
2. can be connected to shielded intra-building cabling grounded at both ends.

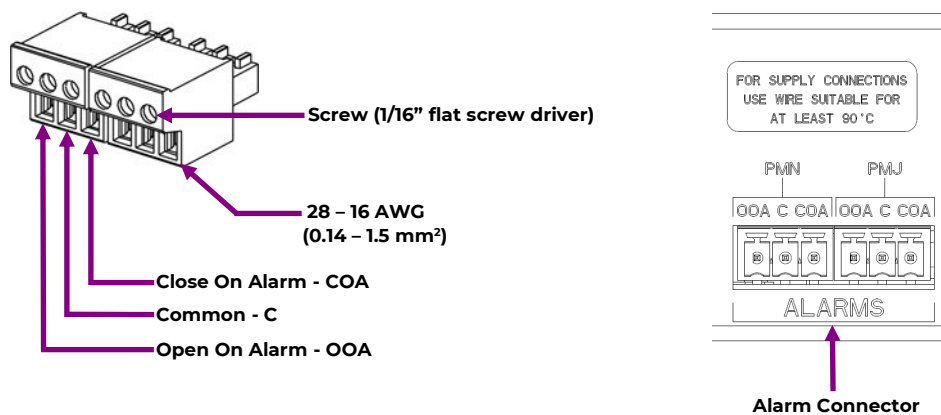


Figure 5. Alarm Connections



## Information – LEDs and Alarms

**LEDs:** Each input and output: Green OK, RED Fault.

**Alarms:** Major (MAJ) indicates abnormal output.

Minor (MIN) indicates abnormal conditions not immediately affecting output.

Shelf Output Condition	LEDs		Circuit Condition (each)	Shelf Alarm
	Out	In		
Normal	●	●	Normal	None
Normal	●	○	Never powered	None
Normal	●	● Blink	Not powered, was previously powered	MIN
Normal	●	● Blink	Circuit internal failure, powered	MIN
Limited - load power exceeds shelf capability	●	●	Circuit in limit mode	MAJ
Unpowered	○	○	Unpowered	MAJ

## Specifications and Application

- Specifications and ordering information are in the Power Express Class 2 Distribution Brochure available at [omnionpower.com](http://omnionpower.com)
- External Surge Protective Devices (SPD)
- Evaluated surge withstand – 1000V, 10/1000 µs pulse.
- Primary protection or other surge protection devices are required on each input where the transient over voltage due to atmospheric discharge and faults in power distribution systems exceeds these levels.
- For example, external SPDs are required when the product is used with outdoor overhead wiring.
- Equipment and subassembly ports:
  - are suitable for connection to intra-building or unexposed wiring or cabling;
  - can be connected to shielded intra-building cabling grounded at both ends.
- Grounding / Bonding Network – Connect to an Isolated Ground Plane (Isolated Bonding Network) or an Integrated Ground Plane (Mesh Bonding Network or Common Bonding Network).
- Installation Environment – Install in Network Telecommunication Facilities, OSP, or Restricted Access location.
- Equipment must be permanently connected.
- DC return may be either Isolated DC return (DC-I) or Common DC return (DC-C).
- Either DC Output polarity (**OUT+** or **OUT-**) must be externally connected to DC Reference Ground (CO Ground).

## Reference Documents

These documents are available at [omnionpower.com](http://omnionpower.com).

Document	Title
850047711	Power Express Remote circuit combiner

## Change History (excludes grammar & clarifications)

Revision	Date	Description of the change
1.0	01/04/2022	Initial Release
1.1	11/04/2024	Updated as per OmniOn Power™ template

**OmniOn Power Inc.**

601 Shiloh Rd.  
Plano, TX USA

[omnionpower.com](https://omnionpower.com)

We reserve the right to make technical changes or modify the contents of this document without prior notice. OmniOn Power does not accept any responsibility for errors or lack of information in this document and makes no warranty with respect to and assumes no liability as a result of any use of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of OmniOn Power. This document does not convey license to any patent or any intellectual property right. Copyright© 2024 OmniOn Power Inc. All rights reserved.